

# Dell Pro Plus Keyboard KB700




## User's Guide

Keyboard Model: KB700  
Regulatory Model: KB7221Wt/SD-8160



# Notes, Cautions, and Warnings

---

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2022-2024 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2024-12

Rev. A03

# Contents

Notes, Cautions, and Warnings.....	2
What's in the box .....	5
Features .....	6
Wireless keyboard.....	6
Dell Display and Peripheral Manager.....	8
Setting up your wireless keyboard.....	9
Pairing your wireless keyboard .....	11
Pairing your wireless keyboard with a USB receiver.....	11
Pairing your wireless keyboard using Bluetooth .....	13
Pairing device three using Bluetooth .....	16
Wireless keyboard specification.....	19
General.....	19
Electrical .....	19
Physical characteristics .....	20
Environmental.....	20

Troubleshooting..... 21

Oman Regulatory Information..... 24

    Regulatory Model: KB7221Wt, SD-8160..... 24

Statutory Information..... 25

    Warranty ..... 25

        Limited warranty and return policies ..... 25


        For U.S. customers: ..... 25

        For European, Middle Eastern and African customers: ..... 25

        For non-U.S. customers: ..... 25

# What's in the box

---

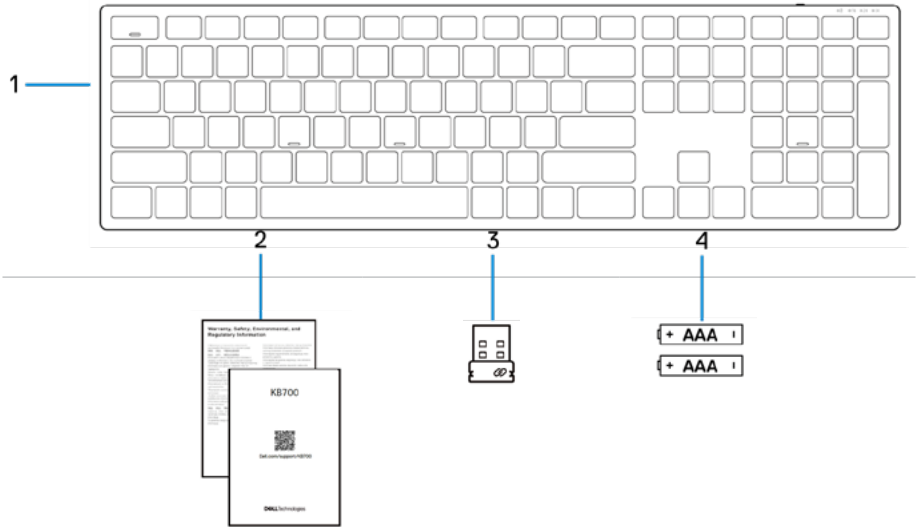

1 Wireless keyboard

2 Documents


3 USB receiver

4 Batteries (AAA-type x2)

# Features

---

## Wireless keyboard

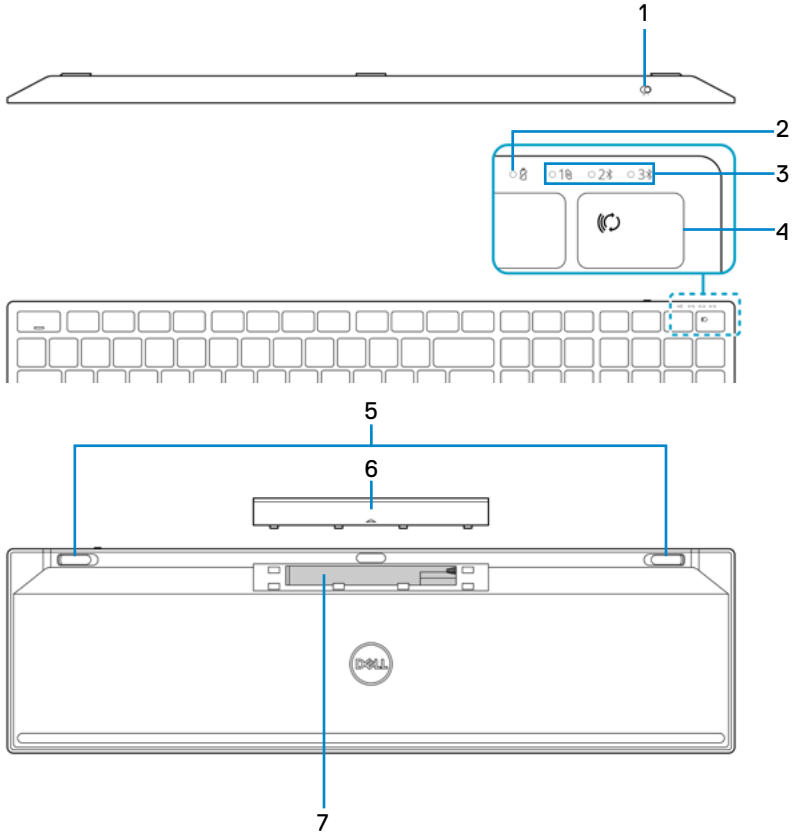

- 1 Power switch
- 2 Battery-status light
- 3 Connection-mode lights
- 4 Connection-mode button
- 5 Keyboard feet
- 6 Battery-compartment cover
- 7 PPID (Piece Part Identification) label



**NOTE: Caps/Num lock LED Behavior:**

Both Lock LED will be “On” for five seconds once pressed and then goes “Off” even if the user continues to type under current state. LED will only be “On” for 5 seconds again if the user presses the Num Lock/ Caps Lock keys again. The lock state will also be reflected in the OSD (On Screen Display) if the Dell Display and Peripheral Manager is installed on the user’s computer.

# Dell Display and Peripheral Manager

---

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Assign shortcuts to programmable keys of your keyboard through the **Key Customization** tab.
- View device information such as firmware version and battery status for wireless devices.
- Upgrade to the latest firmware for your device.
- Pair or unpair to the RF dongle.

## Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.


**NOTE:** If the download prompt does not appear within a few minutes, you can manually install the software from the **Drivers & Downloads** tab on [www.dell.com/support/kb700](http://www.dell.com/support/kb700).

For more information, see *Dell Display and Peripheral Manager User's Guide* in the **Documentation** tab.


# Setting up your wireless keyboard

---


1 Remove the battery-compartment cover.

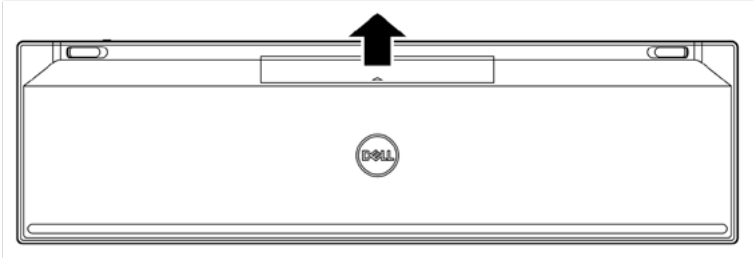


2 Install the AAA batteries into the battery compartment.

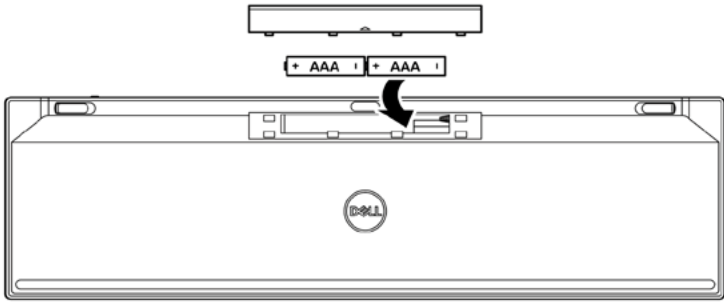

3 Replace the battery-compartment cover.

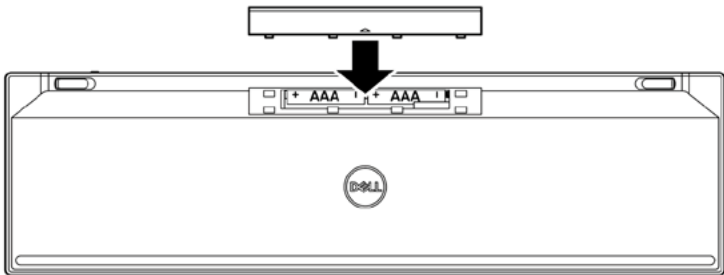

4 Slide the power switch to the right to turn on the wireless keyboard.

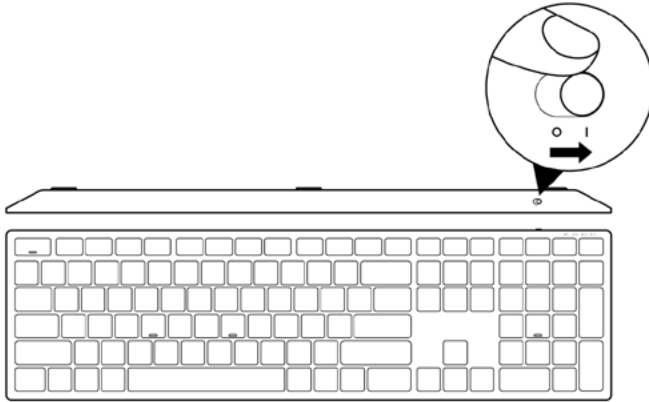

**NOTE:** Ensure that the distance between your computer and wireless keyboard is within ten meters.

# Pairing your wireless keyboard

---

Your Dell wireless keyboard can be paired with devices using either the USB receiver or Bluetooth. You can pair and switch between a laptop, desktop, or any compatible mobile device.


## Pairing your wireless keyboard with a USB receiver

**NOTE:** You can connect a device to your wireless keyboard using the Dell Universal pairing.


1 Connect the Dell Universal USB receiver to the USB port on your computer.

**NOTE:** A USB Type-C to Type-A adapter (sold separately) is required if your computer does not support USB Type-A port.


**NOTE:** The RF device is pre-paired in the factory.

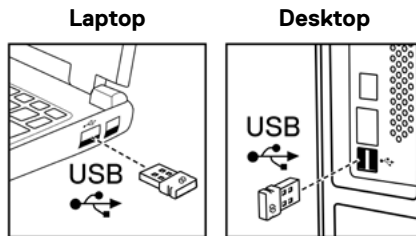

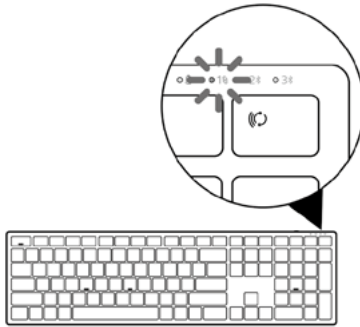

- 2 The connection-mode light (1Ⓢ) on the wireless keyboard is set to Dell Universal Pairing by default.

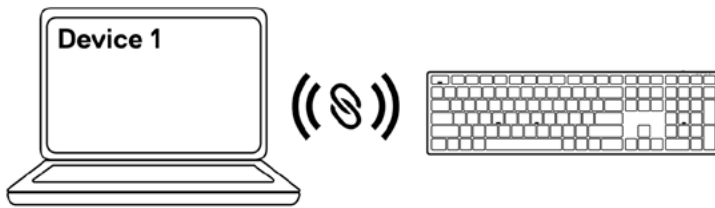


- 3 The wireless keyboard is paired with your USB device.




## Pairing your wireless keyboard using Bluetooth

-  **NOTE:** You can connect up to two devices with your wireless keyboard using Bluetooth.
-  **NOTE:** Before pairing your wireless keyboard using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](https://Dell.com/support).

- 1 Press the connection-mode button a few times on your keyboard until the connection-mode light (2⌘ BLE-2) turns on, indicating that the second-Bluetooth connection is selected.

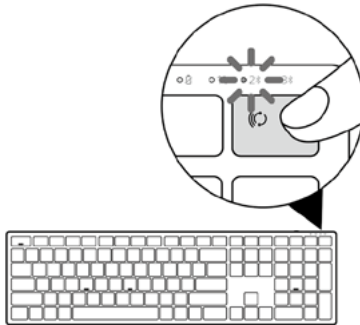


- 2 Press and hold the connection-mode button for 3 seconds to initiate pairing.  
The connection-mode light (2⌘) blinks for 3 minutes, indicating your wireless keyboard is in the pairing mode.

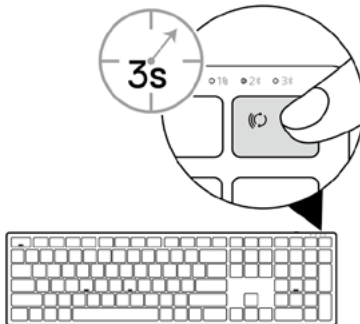


3 Pair your wireless keyboard with your Bluetooth-enabled computer.

**Swift Pair:**

 - a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the “Show notifications to connect using Swift Pair” box is checked.




- d. Ensure that the Bluetooth is turned on.
- e. Place your wireless keyboard near your computer. The New Dell Keybd found window appears.
- f. Click Connect and confirm the pairing process on both wireless keyboard and your computer.

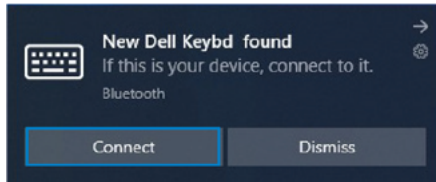

**Add Device:**


- a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the Bluetooth is turned on.
- d. Click **Add Bluetooth or other device > Bluetooth**.
- e. From the list of available devices, click **Dell Keybd**.

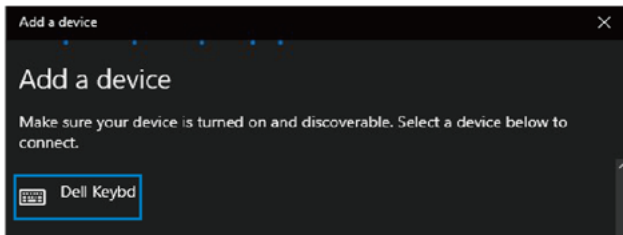



**NOTE: If Dell Keybd is not listed, ensure that the pairing mode is enabled on the wireless keyboard.**

 4 Confirm the pairing process on both wireless keyboard and your computer.


The connection-mode light (2\*) turns solid white for a few seconds to confirm the pairing, and then the light turns off. Once your wireless keyboard is paired with your computer, it will automatically connect whenever Bluetooth is enabled, and both devices are within range.




## Pairing device three using Bluetooth

-  **NOTE:** You can connect a third device to your wireless keyboard using Bluetooth.
-  **NOTE:** Before pairing your wireless keyboard using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](https://www.dell.com/support).

- 1 Press the connection-mode button a few times on your keyboard until the connection-mode light (3⌘ BLE-3) turns on, indicating that the third-Bluetooth connection is selected.

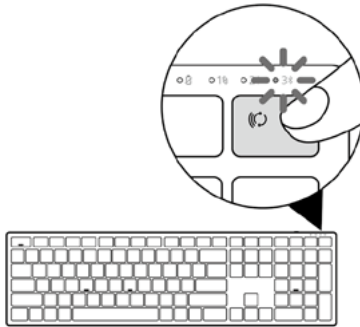


- 2 Press and hold the connection-mode button for 3 seconds to initiate pairing.  
The connection-mode light (3⌘) blinks for 3 minutes, indicating your wireless keyboard is in the pairing mode.

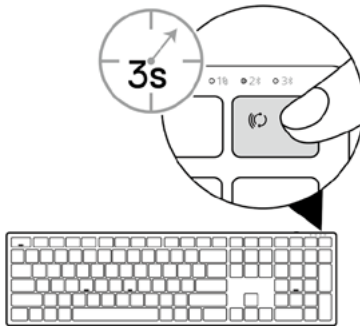


- 3 Pair your wireless keyboard with your Bluetooth-enabled computer.

**Swift Pair:**

 - a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the “Show notifications to connect using Swift Pair” box is checked.




- d. Ensure that the Bluetooth is turned on.
- e. Place your wireless keyboard near your computer. The New Dell Keybd found window appears.
- f. Click Connect and confirm the pairing process on both wireless keyboard and your computer.

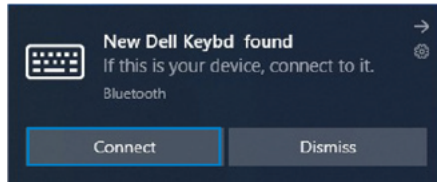

**Add Device:**


- a. In Windows Search, type **Bluetooth**.
- b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
- c. Ensure that the Bluetooth is turned on.
- d. Click **Add Bluetooth or other device > Bluetooth**.
- e. From the list of available devices, click **Dell Keybd**.

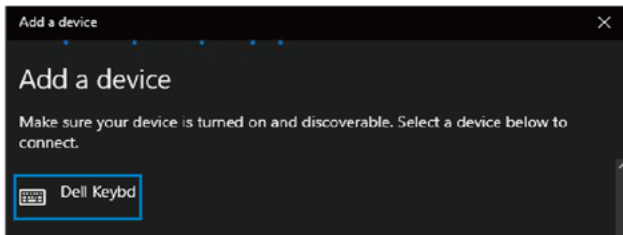

**NOTE: If Dell Keybd is not listed, ensure that the pairing mode is enabled on the wireless keyboard.**

4 Confirm the pairing process on both wireless keyboard and your computer.

The connection-mode light (3\*) turns solid white for a few seconds to confirm the pairing, and then the light turns off. Once your wireless keyboard is paired with your computer, it will automatically connect whenever Bluetooth is enabled, and both devices are within range.

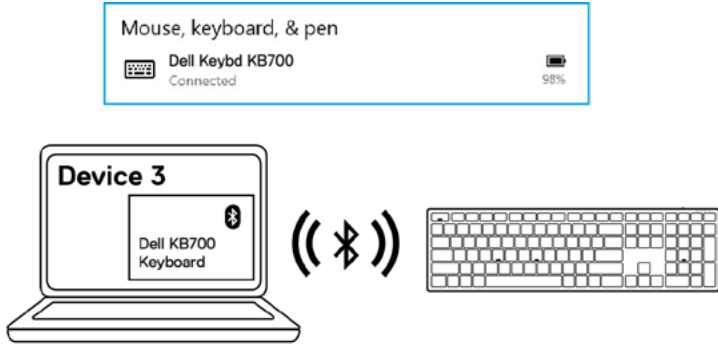

# Wireless keyboard specification

---

## General

Wireless keyboard model number	KB700
RF protocol	<ul style="list-style-type: none"><li>• Bluetooth 5.0 LE (supports Microsoft Swift Pair)</li><li>• 2.4 GHz RF</li></ul>
Encryption technology	AES 128 bits and AES-CCM
Operating range	<ul style="list-style-type: none"><li>• 10 m radio range</li><li>• No performance degradation up to max. radio range (10 m)</li><li>• Performance to be in par with or better than Dell existing shipping wireless keyboard. Dell will provide a benchmark reference product.</li></ul>
Supported operating systems (2.4 GHz)	<ul style="list-style-type: none"><li>• Windows 11/10/8/7/XP/Vista Server 2003/Server 2008/Server 2012</li><li>• Linux Ubuntu 18 and Red Hat 8 Enterprise, Free DOS</li><li>• Chrome and Android</li><li>• MAC OS</li></ul>
Supported operating systems (Bluetooth)	<ul style="list-style-type: none"><li>• Windows 11/10/8</li><li>• Chrome and Android</li><li>• MAC OS</li></ul>

## Electrical

Operating voltage	2.0 V - 3.2 V
Battery required	Two AAA alkaline
Radio transmission	Bi-directional communication
Transmission range	Up to 10 m

## Physical characteristics

Weight (with battery) 654 g (1.44 lb)

Weight (without battery) 676 g (1.49 lb)

Dimensions:

Length 433.30 mm (17.05 in.)

Width 121.50 mm (4.78 in.)

Height 28.36 mm (1.11 in.)

## Environmental

Temperature:

Operating 0°C to 40°C (32°F to 104°F)

Storage -40°C to 65°C (-40°F to 149°F)

Storage humidity 95% maximum relative humidity; non-condensing

# Troubleshooting

---

Problems	Possible solutions
Unable to use the wireless keyboard	<ol style="list-style-type: none"><li>1 Check if the battery is inserted correctly. Battery “+” and “-” ends should follow those indicated on the battery compartment label.</li><li>2 Check the battery level.<ul style="list-style-type: none"><li>• If the mouse uses a rechargeable battery, ensure that the battery is fully charged.</li><li>• If the battery is exhausted, replace it with a new one.</li></ul></li><li>3 Turn the wireless keyboard off, and then turn it on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.</li><li>4 Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.</li><li>5 Change the USB port. Insert the USB receiver into another USB port on your computer.</li><li>6 Update the Bluetooth driver on your computer:<ol style="list-style-type: none"><li>a) Open the web browser and download the latest Bluetooth drivers from <b>Dell.com/support</b>.</li><li>b) Restart your computer.</li></ol></li></ol>

Unable to pair the wireless keyboard to the computer using Bluetooth

- 1 Check the battery level.
  - If the wireless keyboard uses a rechargeable battery, ensure that the battery is fully charged.
  - If the battery is exhausted, replace it with a new one.
- 2 Turn the wireless keyboard off, and then turn it on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery status light will not turn on.
- 3 Restart your computer.
- 4 Check that the operating system is Windows 11/Windows 10/Windows 8/ Chrome/Android.
- 5 Ensure that the wireless keyboard is set to Bluetooth Low Energy (BLE) mode in your computer. For more information, see the documentation shipped with your computer.

Unable to pair the wireless keyboard with the computer

- 1 Check the battery level.
  - If the wireless keyboard uses a rechargeable battery, ensure that the battery is fully charged.
  - If the battery is exhausted, replace it with a new one.
- 2 Turn the wireless keyboard off, and then turn it on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.
- 3 Restart your computer.
- 4 Ensure that the USB receiver is connected directly to your computer. Avoid using the port replicators, USB hubs, and so on. Change the USB port. Insert the USB receiver into another USB port on your computer.

Wireless connection is lost

Dell Display and Peripheral Manager software features not working as intended

The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer. For more information, see the documentation for Dell Display and Peripheral Manager at [www.dell.com/support/ddpm](http://www.dell.com/support/ddpm).

# Oman Regulatory Information

---

Regulatory Model: KB7221Wt, SD-8160



# Statutory Information

---

## Warranty

### Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

### For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

### For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Dell.com/terms](https://www.dell.com/terms), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

### For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.