

Panasonic®

Operating Instructions

Easy Use Mobile Phone

Model No. **KX-TU446 EX**




Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

Before initial use, see “Important Information” on page 14.

Supplied accessories

- Power adapter (Part No. TPA-97H050055VW01): 1 pc
- Rechargeable battery (Part No. 514047AR): 1 pc
- Headset (Part No. JYK-E112): 1 pc

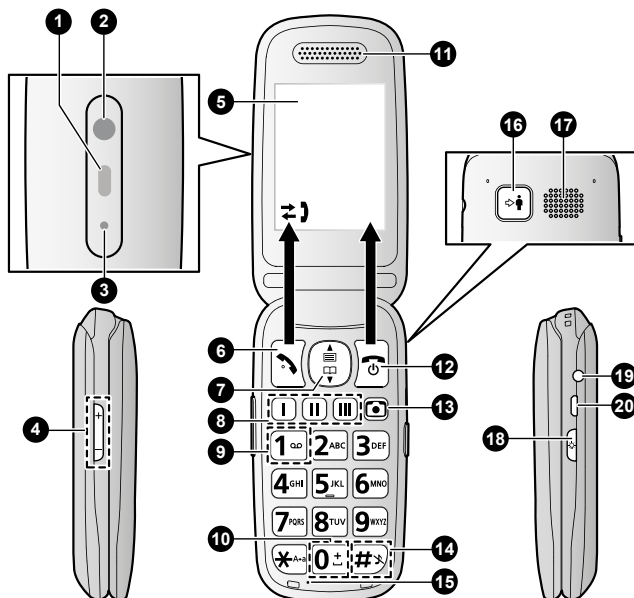

- 1** LED light
- 2** Camera lens
- 3** LED status indicator
- 4** Volume up/down
Change font size of display.
- 5** Display

- 6** Make calls/Answer calls
Left function key (Select the function shown above.)
- 7** Navigation key
 - ▲(☰): Open the main menu.
 - ▼(☐): View the contacts list.
- 8** One touch dial key; page 20
- 9** Call voicemail
- 10** International call
- 11** Receiver
- 12** Power/End calls
Right function key (Select the function shown above.)
- 13** Camera key
- 14** Silent mode on/off. (Press and hold for 2 seconds.)
- 15** Microphone
- 16** Priority call; page 36
- 17** Speaker
- 18** LED light on/off
(It turn off automatically in about 2 minutes.)
- 19** Headset jack
- 20** USB connector (Micro-B type)

Getting Started

Setting up	5
Display	8
Turning the power on/off	11
Initial settings	11

Important Information

For your safety	13
Important safety instructions	15
For best performance	16
Other information	16
SAR	17
Specifications	18

Basic Operations

Making calls	19
End the call	20
Answering calls	21
Call log	21
Voicemail service	22
Text input	23
Messages	23
Phonebook	28
Alarm	31
Night mode	32
Calendar/Schedule	33
Voice recording	35
Priority call	36
Network service call features	38
Security settings	40
Camera	41
Image viewer	43
File manager	44

Customising Your Phone

Menu list	46
-----------------	----

Connecting to Other Devices

Using a Bluetooth® wireless connection	59
Using a USB connection	63

Useful Information

Troubleshooting	64
General information	69
Sales department	70

Index

Index	72
-------------	----


Setting up

Inserting a SIM card, microSD card, and the battery


- 1 Remove the phone's cover.




- 2 Insert the SIM card with the gold-coloured contacts facing down.

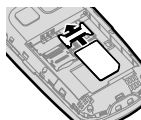

- 3 Open the microSD card cover by sliding (1) and then lifting up (2).

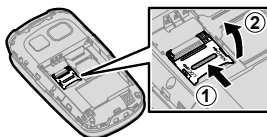

- 4 Put the microSD card with the gold-coloured contacts facing down, close the microSD card cover (1), and then gently slide the cover (2).

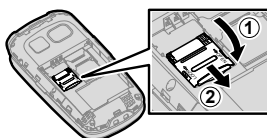

- 5 Insert the battery (1) and lower it into the phone (2), then attach the cover (3).



Getting Started

Important:

- When removing the battery, make sure you turn off the phone first.
- To avoid loss of data or malfunction, do not damage, carelessly handle, or short-circuit the gold-coloured contacts of the SIM card or microSD card.

Note:

- Use only the battery specified.
- Wipe the battery ends (+, -), SIM card, and microSD card with a dry cloth.
- Avoid touching the battery ends (+, -) or the unit contacts.

Battery charging

◆ AC adaptor or USB connection

Battery indicator



































Note:




























- When charging begins, the phone sounds*¹ and the battery indicator lights.
- When the battery is fully charged, the battery indicator turns off.
- It is normal for the phone and AC adaptor to feel warm during charging.

*1 The preset melodies in this product are used with permission of © 2014 Copyrights Vision Inc.

Display

Symbols

-  **S** Signal strength
-  **R**: Roaming network
-  **E**: The phone is connected to an EDGE network.
-  **G**: The phone is connected to a GPRS network.
-  Battery level
- : High
 - : Medium
 - : Low
 - : Needs charging.
-  The phone is connected to a computer via USB.
-  The call is not encrypted.*¹
-  Silent mode is on. (page 3, 57)
-  Vibration is on. (page 57)
-  Handsfree is on. (page 20)
-  Ringer volume off.
-  Incoming call
-  Outgoing call
-  Missed call
-  Mute is on. (page 20)
-  Frequency control equalizer is set. (page 20)
-  A 2nd call is on hold.
- 
 - Contact is saved to the phone.
 - Root directory of phone.
 - Mobile phone is discovered in Bluetooth search menu.
-  Contact is saved to the SIM card.
-  Contact name
-  Mobile phone number
-  Office phone number
-  Home phone number
-  Fax number
-  Selected ringer tone.
- 
 - New SMS message is received.
 - SMS message (unread/unsent) is saved to the phone.
-  SMS message (sent) is saved to the phone.
-  SMS message (opened) is saved to the phone.



















-  SMS message (unread/unsent) is saved to the SIM card.
 -  SMS message (sent) is saved to the SIM card.
 -  SMS message (opened) is saved to the SIM card.
 -  MMS is running for sending or receiving data.
 - 
 - New MMS message is received.
 - MMS message is unread or unsent.
 -  MMS message is read.
 -  MMS message is unreceived.
 -  MMS message is sent.
 - 
 - Image file
 - Image file is attached to the MMS message.
 - Image file is selected for caller picture.
 -  Root directory of memory card
 - 
 - Sound file
 - Sound file is attached to the MMS message.
 -  VCF (vCard) file
 -  Other format file
-  Other format file is attached to the MMS message.
 -  Folder
 -  MMS recipient is set to To.
 -  MMS recipient is set to Cc.
 -  MMS recipient is set to Bcc.
 -  New voicemail message received.*2 (page 22)
 -  Alarm is on. (page 31, 33)
 -  Night mode is on. (page 32)
 -  Headset (optional) is connected.
 - 
 - Bluetooth feature is on. (page 59)
 - Another Bluetooth device is connected.
 -  Bluetooth compatible computer is discovered in Bluetooth search menu.
 -  Bluetooth headset is discovered in Bluetooth search menu.
 -  Bluetooth headset is connected to the phone.
 -  Bluetooth hands-free car kit is discovered in Bluetooth search menu.

*1 Contact your network operator/service provider for more information.

*2 Voicemail subscribers only

Getting Started


Function keys

-  Calls emergency number.
-  Returns to previous screen.
-  Accepts current selection.
-  Erases a number/character.
-  Opens recent call log.
-  Makes/answers a call.
-  Ends the call.
-  Sets handsfree.
-  Opens option menu.
-  Answers a 2nd call.
-  Allows editing.
-  Selects multiple items.
-  Stops alarm.
-  Activates snooze function.
-  Turns the power off.
-  Pauses playback.
-  Resumes playback.
-  Stops recording or playback.

LED color info status indicator

Color	State
Green	Incoming call
Red blinking	Charge error
Red	Low Battery
Red blinking	Delay Timer
Green	Missed call
Blue	Missed SMS/MMS
Yellow	Charging











Turning the power on/off

Press  for about 2 seconds.

- the phone sounds.*1

 













*1 The preset melodies in this product are used with permission of © 2014 Copyrights Vision Inc.

Initial settings

- 1 : Select the desired language.  
- 2 : Select the desired time zone.  
- 3 Enter the current date, month, and year.  
- 4 Enter the current time.  

Note:

- If you select a language you cannot read:







Press .  : Select .   2 times  
 2 times    : Select the desired language.
 

Display font size









Press **+** or **-** to adjust the font size.

Changing the ringer tone

Using a preset ringer tone

- 1 Press **▲**. \Rightarrow **▼/▲**: Select . \Rightarrow 
 - 2 **▼/▲**: “General” \Rightarrow 
 - 3 **▼/▲**: “Customize” \Rightarrow 
 - 4 **▼/▲**: “Ringtone” \Rightarrow 
 - 5 **▼/▲**: Select the desired ringer tone. \Rightarrow 
-

Using your own sound file

- 1 Press **▲**. \Rightarrow **▼/▲**: Select . \Rightarrow 
 - 2 **▼/▲**: “General” \Rightarrow 
 - 3 **▼/▲**: “Customize” \Rightarrow 
 - 4 **▼/▲**: “Ringtone” \Rightarrow 
 - 5 **▼/▲**: “Select from File” \Rightarrow 
 - 6 **▼/▲**: Select the desired memory location (root directory). \Rightarrow 
 - 7 **▼/▲**: Select the desired folder and/or file. \Rightarrow 
-

Audible dialling

When you turn this feature on, numbers are announced when pressing dial keys. To change this setting, see page 57.

For your safety

Read this section carefully before using the product to ensure proper and safe operation. Failure to read them carefully may cause severe injury, loss of life/property, or be illegal.

WARNING

Power connection

- Use only the power source marked on the product.
 - Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
 - Completely insert the AC adaptor into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
 - Regularly remove any dust, etc. from the AC adaptor by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
 - Unplug the product from power outlets and remove the battery from the phone if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
 - Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
 - Never touch the plug with wet hands. Danger of electric shock exists.
 - The AC adaptor should only be used indoors.
 - Do not use the supplied AC adaptor with other devices.
-

Installation

- This product is not water-resistant. To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
 - Keep all accessories, including the SIM card and microSD card, out of the reach of children to prevent swallowing.
 - This product emits radio waves and may cause interference to other electronic devices.
 - Do not allow the AC adaptor to be excessively pulled, bent or placed under heavy objects.
 - To prevent serious damage to this product, avoid strong impacts and rough handling.
 - To avoid damage or malfunction, do not modify the SIM card or microSD card or touch the card's gold-coloured contacts.
-

Battery

- Use only the battery specified.
 - Risk of explosion if battery is replaced with an incorrect type. Dispose of used batteries according to the instructions.
 - Do not open, puncture, crush, or drop the battery. A damaged battery must not be used. This can result in the risk of fire, explosion, overheating, and leaking of the electrolyte.
 - Stop using the battery immediately and keep away from fire if it emits an abnormal smell or leaks electrolyte. Released electrolyte may cause fire or burns.
 - Do not touch released electrolyte if the battery leaks. It may cause burns or injury to the eyes
-

Important Information

or skin. The electrolyte is toxic and may be harmful if swallowed. If you touch it, immediately wash the affected areas with water and seek medical help.

- Exercise care when handling the battery. Do not allow conductive materials such as rings, bracelets, or keys to touch the battery, otherwise a short circuit may cause the battery and/or the conductive material to overheat and cause burns.
 - Do not use or charge a wet battery. This can result in the risk of fire, explosion, overheating, and leaking of the electrolyte.
 - Charge the battery provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
 - Only use a compatible charger to charge the battery. Do not tamper with the charger. Failure to follow these instructions may cause the battery to swell or explode.
 - Do not put any conductive materials such as coins or hairpins onto the charge contacts. This can result in the risk of overheating.
-

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the SIM card holder. This can result in the risk of fire, electric shock, or malfunction.
- Do not leave this product near heat sources (such as radiators, cookers, etc.), in direct sunlight, or in a car under blazing sun. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C.
- You are advised not to use the phone in an aircraft. Turn the phone off before boarding an aircraft. Set the alarm function off so that the phone cannot be automatically turned on. Using this phone in an aircraft may be hazardous to the aircraft's operation and disrupt wireless communication. It may also be illegal.
- You are advised not to use this product at refuelling points. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.
- It is imperative that drivers exercise proper control of vehicles at all times. Do not use a phone while you are driving; find a safe place to stop first. Do not speak into a hands free microphone if it will take your mind off the road. Always acquaint yourself thoroughly with restrictions concerning the use of phones within the area where you are driving and observe them at all times.
- RF signals may affect electronic systems in motor vehicles (for example, fuel injection, air bag systems) that have been improperly installed or are inadequately shielded. For more information, consult the manufacturer of your vehicle or its equipment.
- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.



- Do not shine the LED light close to anybody's eyes or turn the LED light in the direction of car drivers. This can result in the risk of injuries or accident.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or implanted cardioverter defibrillators to determine if they are adequately shielded from external RF (radio frequency) energy.
- Wireless Technology Research (WTR) recommends a minimum separation of 15.3 cm between a wireless device and an implanted medical device such as pacemaker or implanted cardioverter defibrillator to avoid potential interference with the medical device. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical devices, turn off the phone immediately and contact the manufacture of pacemaker or other medical devices.
- Turn off the phone in hospitals or health care facilities when any regulations posted in the area instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Hearing aids

- This phone is hearing aid compatible and is rated equivalent to the M4/ T4 rating of the ANSI C63.19 test method. Most hearing aids on the market should be compatible with this product but compatibility is not guaranteed. Please consult with your Doctor or hearing aid manufacturer before using a hearing aid with this product.

CAUTION

Installation

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- It is recommended that you keep a written record of any important data which you store in your phone or SIM card in order to avoid accidental loss.

Operating environment

- Do not place magnetic cards or similar objects near the phone. Magnetic data on cash cards, credit cards, telephone cards and floppy disks, etc. may be deleted.
- Do not put magnetic substances close to the phone. Strong magnetism might affect operation.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water. For example, avoid areas near a bathtub, washbowl, kitchen sink, laundry tub, or swimming pool.
2. Avoid using the phone if charging during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the phone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and battery indicated in this manual. Do not dispose of the battery in a fire. It may explode. Check with local codes for possible special disposal instructions.
5. Do not paint or attach a thick sticker to the phone. This may prevent proper operation.

SAVE THESE INSTRUCTIONS

For best performance

Environment

- The product should be kept free from excessive smoke, dust, moisture, high temperature and vibration.
 - To avoid damage, charge the battery only in temperatures ranging from 5 °C to 35 °C.
-

Routine care

 
- Wipe the outer surface of the product and/or charge contacts with a soft and dry cloth.
 - Do not use benzine, thinner, or any abrasive powder.
-

Other information

Notice for product disposal, transfer, or return

- This product and SIM card can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as contacts stored in the contacts list, call logs, and SMS/MMS messages from the memory before you dispose of, transfer, or return the product.
-

Disposal of Old Equipment and Batteries (Only for European Union and countries with recycling systems)



These symbols (①,②) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①,②) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Note for the battery removal procedure

Remove the phone's cover (①), and lift the battery (②), then remove it (③).



Trademarks

- microSDHC Logo is a trademark of SD-3C, LLC.
 - The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Panasonic Corporation is under licence.
 - All other trademarks identified herein are the property of their respective owners.
-

Notice

- The phone supports microSD and microSDHC memory cards. In this document, the term “microSD card” is used as a generic term for any of the supported cards.
-

Ecodesign information

Ecodesign information under EU Regulation (EC) No. 1275/2008 amended by (EU) Regulation No. 801/2013.

ErP Free Web Product Information” is available at the following URL:
<https://www.ptc.panasonic.eu/compliance-documents>

Power consumption in networked standby and guidance are mentioned in the web site above.

SAR

This model meets international guidelines and EU requirements for exposure to radio waves. Your wireless device is a radio transmitter and receiver. It is designed not to exceed radio wave exposure limits recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure.

Important Information

The protection of all persons, regardless of age and health. These guidelines also form the basis of international regulations and standards on RF Exposure.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for wireless devices is 2 W/kg.

The highest SAR value for this device tested at the head was: 0.216 W/kg

The highest SAR value for this device tested on the body was: 1.767 W/kg^{*1}

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this unit while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to communicate with the network.

ICNIRP (<http://www.icnirp.org>)

^{*1} This device was tested for typical body-worn operation with the back of the phone kept 0.5 cm from the body.


Specifications

- **Standard:**
 - Dual band GSM 900/1 800 MHz
 - Bluetooth version 3.0, Class 2
 - USB version 1.1
- **Display:** TFT colour 2.4-inch (QQVGA: 240 x 320 pixels)
- **Camera:** 0.08 MP
- **Frequency range:**
 - GSM900 880–915 MHz
 - 925–960 MHz
 - GSM1800 1 710–1 785 MHz
 - 1 805–1 880 MHz
 - Bluetooth: 2.402–2.48 GHz
- **RF transmission power:**
 - GSM 900: 2 W (max.),
 - GSM 1800: 1 W (max.)
 - Bluetooth: 2.5 mW (max.)
- **Power source:**
 - 100–240 V AC, 50/60 Hz
- **Power consumption (when charging):**
 - Standby: Approx. 0.3 W
 - Maximum: Approx. 4.0 W
- **Operating/Charging conditions:**
 - Operating: 0 °C – 40 °C, 20 % – 80 % relative air humidity (dry)
 - Charging: 5 °C – 35 °C
- **Battery:**
 - Li-Ion 3.7 V/1,000 mAh
- **Battery performance (supplied):**
 - Talk time: Approx. 5.0 hours^{*1}
 - Standby time: Approx. 600 hours^{*1, *2}
- **Antenna:**
 - Internal
- **SIM card type:**
 - 1.8 V/3 V
- **Memory card type:**
 - microSD, microSDHC up to 32 GB (not supplied)





^{*1} Operating time is dependent upon usage environment, battery age and condition. Values were calculated according to GSMA TS.09.

^{*2} The incoming call indicator and message indicator flash when there is a missed call or a new message is received. The standby time will be shortened when you leave the indicator flashing.




Making calls

- 1 Enter the phone number (40 digits max.).
- 2 Press  to dial.

Note:




- To switch to a handsfree:
 ⇒ : “Handsfree On” ⇒ .
- To make an international call, press and hold **0**  until “+” (the international prefix) is displayed.
- To insert a pause (3 seconds per pause), press and hold ***** until “p” is displayed.

Making a call using the call log




- 1 Press  to display the call log in standby mode.
- 2 : Select the desired party. ⇒ 

Making a call using the phonebook

To store a contact

- 1 Press  in standby mode.
- 2 : Select the desired contact. ⇒ 

Note:

- To change the search language:
 ⇒ : Select the desired language. ⇒ 
- Press a dial key ([**0**] to [**9**]) repeatedly to display the contact corresponding to that key.


Making a call using a one touch dial key

To assign a contact to a one touch dial key, see page 30.

- 1 Press and hold the desired one touch dial key ([I] to [III]).

Making a call using a speed dial key

To assign a contact to a speed dial key, see page 30.

- 1 Press and hold the desired speed dial key ([2] to [9]). ⇒ 

Call options

Pressing :

- | | |
|----------------------------------|---------------|
| - "Hold"/"Retrieve" | - "Phonebook" |
| - "Equalizer" | - "Call Log" |
| - "Mute On"/"Mute Off" | - "Messages" |
| - "Handsfree On"/"Handsfree Off" | |

End the call


- 1 Press  to end the call.

Answering calls


When a call is being received, the incoming call indicator flashes rapidly (page 11).

1 Press  to answer.

Note:

- To answer a call by opening the phone, see page 51.
- To reject the call, press .

Missed calls

“**Missed Call**” and the number of missed calls are shown on the display. You can view the missed call log by pressing  when it is displayed.

Call log

Incoming, outgoing, and missed calls are stored in a call log (maximum 10 calls each).

Note:

- “**Unknown Number**”: The caller’s information could not be received.
- “**Withheld**”: The caller requests not to send their phone number.

Call log options

Press ▲. ⇒ ▼/▲: Select . ⇒ ⇒ ▼/▲: “Call Log” ⇒ ⇒ ▼/▲: Select a call log list. ⇒ ⇒

▼/▲: Select a log. ⇒ ⇒ :

- | | |
|--------------|-------------------|
| - “Call” | - “Add Phonebook” |
| - “Send SMS” | - “Use Number” |
| - “Send MMS” | - “Delete” |

Vicemail service

Contact your network operator/service provider for details. You must first confirm that the correct voicemail access number is stored.

Storing the voicemail access number




















- 1 Press ▲. ⇒ ▼/▲: Select . ⇒
- 2 ▼/▲: “Settings” ⇒
- 3 ▼/▲: “SMS” ⇒
- 4 ▼/▲: “Voicemail” ⇒
- 5 ▼/▲: “Edit” ⇒
- 6 Enter the voicemail access number. ⇒

Listening to voicemail messages

- 1 Press and hold **1** ^{oo} when in standby mode.

Text input

Each dial key has multiple characters assigned to it. The assigned characters for each key will be displayed when you press the key.

- Press / to move the cursor right or left.
- Press and hold / to move the cursor up or down.
- Press  to erase the character or number to the left of the cursor.
- To insert a space, press **0**  or select “_” in the symbol list.
- Press  (A→a) to change the input letter case. For example, lower case (abc/αβγ), auto case (Abc/Aβγ), upper case (ABC/ABΓ), and numeric (123).
- To select a symbol:
 ⇒  /: Select the desired symbol. ⇒ 
- To change the input language:
 ⇒  /: “Input Language” ⇒  ⇒ 
Select the desired input language. ⇒ 

Messages







- SMS (Short Message Service):
You can send and receive text messages.
- MMS (Multimedia Messaging Service):





If you have subscribed to a network service that supports it, you can also send and receive messages containing pictures, sound, or contacts lists.

Note:

- For details and the availability of these services, contact your network operator/service provider.

Creating and sending an SMS message

- 1 Press **▲**. \Rightarrow **▼/▲**: Select . \Rightarrow 
- 2 **▼/▲**: “Create Message” \Rightarrow 
- 3 **▼/▲**: “SMS” \Rightarrow 
- 4 Enter a message (page 23). \Rightarrow 
- 5 **▼/▲**: “Send to” \Rightarrow 
- 6 Input the phone number.

Manually	▼/▲ : “Manual Input” \Rightarrow  \Rightarrow \Rightarrow Enter destination phone number. \Rightarrow 
Contacts list	▼/▲ : “Add from List” \Rightarrow  \Rightarrow \Rightarrow ▼/▲ : Select the desired contact. \Rightarrow 

- 7  \Rightarrow **▼/▲**: “Send” \Rightarrow 





Note:




- If your SMS message contains over 160 characters (70 characters depending on character type), it is a long message. You can send or receive a long message of up to 1224 or 536 characters depending on character

type. Your network operator/service provider may treat long messages differently from other SMS messages. Contact your network operator/service provider for details.

- You cannot send or receive SMS messages containing pictures, sound, or contacts list.

Creating and sending an MMS message

- 1 Press **▲**. \Rightarrow **▼/▲**: Select . \Rightarrow 
- 2 **▼/▲**: "Create Message" \Rightarrow 
- 3 **▼/▲**: "MMS" \Rightarrow 
- 4 Enter a message (page 23). \Rightarrow 

Add a picture file	<ol style="list-style-type: none">1 ▼/▲: "Add Picture" \Rightarrow 2 "My Picture"
Add a sound file	<ol style="list-style-type: none">1 ▼/▲: "Add Sound" \Rightarrow 2 "My Sound"
Add a file as an attachment	<ol style="list-style-type: none">1 ▼/▲: "Advanced" \Rightarrow 2 ▼/▲: "Insert Att."

- 5 => : Select the desired memory location (root directory). =>
- 6 : Select the desired folder and/or file. =>
- 7 => : “Add Subject” => => Enter a subject (page 23). =>
- 8 : “Save” =>
- 9 => : Select “Preview MMS” to confirm the content. => => After confirmation, press .
- 10 => : “Send to” =>
- 11 Input the phone number.

Manually	: “Manual Input” => => Enter destination phone number or E-mail address. =>
Contacts list	: “Add from List” => => : Select the desired contact. =>

- 12 Select the desired recipient to change its attribute to Cc or Bcc if necessary.
: Select the desired recipient to change its attribute. => => : Select “Change to Cc” or “Change to Bcc”. =>
- 13 => : “Send” =>



Note:

- Press or repeatedly to fully display the message and attachment while previewing.

Reading a received message

- 1 Press **▲**. \Rightarrow **▼/▲**: Select . \Rightarrow 
 - 2 **▼/▲**: “Inbox” \Rightarrow 
 - 3 **▼/▲**: Select a message. \Rightarrow 
-

Replying to a message

- 1 While reading a message, press .
- 2 **▼/▲**: Select “Reply by SMS” or “Reply by MMS”.
 \Rightarrow 
- 3 To reply a message.

By SMS	Continue from step 4 in “Creating and sending an SMS message”, page 24.
By MMS	Continue from step 4 in “Creating and sending an MMS message”, page 25.

Messages options

Press ▲. ⇨ ▼/▲: Select . ⇨  ⇨ ▼/▲: Select a desired box. ⇨  ⇨ ▼/▲: Select a message. ⇨

 ⇨ :

- “Reply by SMS”
- “Reply by MMS”
- “Call Sender”
- “Forward Message”
- “Add Phonebook”

- “Delete”
- “Extract Number”
- “Edit Message”
- “Resend”

- If an MMS message is selected, the following options are also available.

- “View”
- “Reply to All”
- “Cancel Send”
- “Save Objects”
- “Move to Phone”/
“Move to SD Card”

- “Copy to Phone”/
“Copy to SD Card”
- “Message Status”
- “Detail”

Phonebook

You can store contacts in the phone (up to 200 contacts.) or SIM card.

You can customise the ringer tone and picture assigned to each contact.

Creating contacts

- 1 Press . : Select .
- 2 : “Add New Contact”
- 3 : “Name”
- 4 Enter the party’s name (page 23).
- 5 : “Save”
- 6 : “Phone num. 1”
- 7 Enter the party’s phone number.
- 8 : Select an icon if necessary.
- 9 If you want customise the ringer tone and picture assigned.

Ringer tone	<ol style="list-style-type: none">1 : “General” 2 : Select the desired ringer tone.
Picture assign	<ol style="list-style-type: none">1 : “Caller Picture” 2 : Select the desired memory location (root directory). 3 : Select the desired folder and/or file.







10 Press to confirm the setting.

11 : “Save”







Note:

- If you want to use one of your own sound files as the contact’s ringer tone, continue from step 5 in “Using your own sound file”, page 12.

Assigning a contact to a one touch dial key

- 1 Press ▲. ⇒ ▼/▲: Select . ⇒ 
- 2 ▼/▲: “One Touch Dial” ⇒ 
- 3 ▼/▲: Select the desired one touch dial key number.
⇒ 
- 4 ▼/▲: “Add from List” ⇒ 
- 5 ▼/▲: Select the desired contact. ⇒ 

Assigning a contact to a speed dial key

- 1 Press ▲. ⇒ ▼/▲: Select . ⇒ 
- 2 ▼/▲: “Speed Dial” ⇒ 
- 3 ▼/▲: Select the desired dial key number. ⇒ 
- 4 ▼/▲: “Add from List” ⇒ 
- 5 ▼/▲: Select the desired contact. ⇒ 

Contacts list options

Press ▲. ⇒ ▼/▲: Select . ⇒  ⇒ ▼/▲:

“Contacts” ⇒  ⇒ ▼/▲: Select a contact. ⇒ :

- | | |
|--|--|
| <ul style="list-style-type: none"> – “Call” – “Detail” – “Edit” – “Create Message” – “Delete” | <ul style="list-style-type: none"> – “Use Number” – “Add New Contact” – “Send vCard” – “Copy” – “Search Letter” |
|--|--|

Alarm

- 1 Press . \Rightarrow : Select . \Rightarrow
- 2 : "Alarm" \Rightarrow
- 3 : Select an alarm. \Rightarrow
- 4 : "Settings" \Rightarrow
- 5 Set the desired time. \Rightarrow
- 6 : Select the desired alarm option.

Once	Alarm sounds once at the set time. 1
Weekly	Alarm sounds weekly at the set time(s). 1 \Rightarrow : Select the desired day of the week. \Rightarrow 2 : "Save" \Rightarrow

- 7 Enter/edit a text memo if necessary (page 23). \Rightarrow
- 8 : "Save" \Rightarrow
- 9 : Select the desired alarm tone. \Rightarrow

Note:

- A total of 5 separate alarm times can be programmed.
- Alarm to sound for 30 seconds at the specified time.
- While the alarm is sounding, a text memo is displayed.
- Press to stop the alarm completely.
- Press to stop the sound but keep the snooze function activated.
- The snooze function will cause it to repeat 3 times at 5 minutes intervals.

- The phone will automatically turn on and the alarm will sound even if the phone is off.
 - The phone vibrates when the silent mode is on.
-

Night mode

This feature stops the phone from ringing when you do not want to be disturbed.

- 1 Press . : Select .
- 2 : "Phone Settings"
- 3 : "Clock Settings"
- 4 : "Night Mode"
- 5 : "On"
- 6 Enter the desired time to start.
- 7 Enter the desired time to end.
- 8 : Select the desired ring delay.

Note:

- If you select "No Ringing", the phone never rings during night mode.
- If you set the ring delay, the phone starts ringing after a selected amount of time has passed.
- If you have set the alarm, the alarm sounds even if the night mode is on.

Calendar/Schedule

Creating a new schedule item

- 1 Press . \Rightarrow : Select . \Rightarrow
- 2 : "Calendar" \Rightarrow
- 3 : Select the desired date.

Specific date	1 \Rightarrow : "Go to Date" \Rightarrow
	2 Enter the desired date, month, and year. \Rightarrow

- 4 \Rightarrow : "Schedule" \Rightarrow
- 5 \Rightarrow : "Create" \Rightarrow
- 6 Edit the date if necessary. \Rightarrow
- 7 Set the desired time. \Rightarrow
- 8 Enter a text memo (page 23). \Rightarrow
- 9 : "Save" \Rightarrow
- 10 : "On" \Rightarrow
- 11 : Select the desired alarm tone. \Rightarrow
- 12

Note:

- You can store up to 100 schedule items (maximum 10 items per day)
- If you set a schedule alarm, an alarm sounds for 30 seconds and a text memo is displayed at the set time.
- Press to stop the alarm completely.
- Press to stop the sound but keep the snooze function activated.
- The phone will automatically turn on and the alarm will sound even if the phone is off.

Viewing/editing/erasing a schedule item

- 1 Press \blacktriangle . \Rightarrow ∇/\blacktriangle : Select . \Rightarrow
- 2 ∇/\blacktriangle : "Calendar" \Rightarrow
- 3 ∇/\blacktriangle : Select the desired date.
- 4 \Rightarrow ∇/\blacktriangle : "Schedule" \Rightarrow
- 5 ∇/\blacktriangle : Select the desired schedule item. \Rightarrow
- 6 Select the desired feature.

Detail	∇/\blacktriangle : "Detail" \Rightarrow
Edit	∇/\blacktriangle : "Edit" \Rightarrow \Rightarrow Continue from step 6 in "Creating a new schedule item", page 33.
Delete	∇/\blacktriangle : "Delete" \Rightarrow \Rightarrow ∇/\blacktriangle : "Yes" \Rightarrow

Erasing all schedule items

- 1 Press \blacktriangle . \Rightarrow ∇/\blacktriangle : Select . \Rightarrow
- 2 ∇/\blacktriangle : "Calendar" \Rightarrow
- 3 \Rightarrow ∇/\blacktriangle : "Delete All Items" \Rightarrow
- 4 ∇/\blacktriangle : Select "All until Today" or "All Items".
 \Rightarrow
- 5 ∇/\blacktriangle : "Yes" \Rightarrow

Voice recording

Recording your voice memo/sound

- 1 Press : Select .
- 2 : “Voice Recorder”
- 3 : “Record”
- 4 Press to stop recording.

Note:

- Up to 20 sound files can be recorded.
 - Recorded files are saved in the phone’s “Audio” folder.
-

Listening to the recorded voice memo/sound

- 1 Press : Select .
 - 2 : “Voice Recorder”
 - 3 : “List”
 - 4 : Select the desired item from the list.
 - 5 : “Play”
-

Erasing a voice memo/sound

- 1 Press : Select .
 - 2 : “Voice Recorder”
 - 3 : “List”
 - 4 : Select the desired item from the list.
 - 5 : Select “Delete” or “Delete All”.
 - 6 : “Yes”
-

Priority call

This feature allows you to ask a registered person for assistance by sending an SMS message and calling them, using ⇨👤 button (on the back of the phone).

Note:

- Store the phone numbers (5 numbers max.) in the list in the desired order of priority.
- ⇨👤 button can be activated even when the phone is closed.
- If you want to turn the buzzer off, see page 50.

Priority call procedure


- 1 Press and hold ⇨👤 button for 3 seconds, or press it 3 times when in standby mode.
- 2 The phone sends your stored SMS message (page 38).
- 3 The phone dials the 1st person in the list. Handsfree is turned on.

call is answered	<ul style="list-style-type: none"> ● you can begin your conversation.
<ul style="list-style-type: none"> – Other party is busy – Rejects the call – Does not answer within 20 seconds 	<ul style="list-style-type: none"> ● The phone automatically dials the next person. ● The phone continues to send SMS messages and dial numbers in the list in sequence, up to a maximum of 2 times.













Important:











- **When Answering machine or Voicemail answered:**
When recording is completed, the phone automatically dials the next person.

Note:

- You can stop the priority call sequence by pressing  while dialling.

Storing a priority call number

- 1 Press . \Rightarrow : Select . \Rightarrow 
- 2 : “Call Settings” \Rightarrow 
- 3 : “Priority Call” \Rightarrow 
- 4 : “Call Number” \Rightarrow 
- 5 : Select the desired position in the call number list. \Rightarrow 
- 6 Input the call number.

Manually	<ol style="list-style-type: none">1 : “Manual Input” \Rightarrow 2 Enter the party’s name (page 23). \Rightarrow 3 : “Save” \Rightarrow 4 Enter the party’s phone number. \Rightarrow 
Contacts list	<p>: “Add from List” \Rightarrow  \Rightarrow</p> <p>: Select the desired contact. \Rightarrow </p>

Note:

- Storing public institutions such as the police, rescue services, or fire brigade is not recommended.

Storing an SMS message

- 1 Press . : Select .
- 2 : “Call Settings”
- 3 : “Priority Call”
- 4 : “Message”
- 5 Enter a message (page 23).
- 6 : “Save”

Note:

- Make sure the SMS service centre number is stored (page 46).

Network service call features

Contact your network operator/service provider for details and availability of the services in your area.

Hold

- 1 Press while talking.
- 2 : “Hold”
- 3 To release hold, press . : “Retrieve”




Call waiting

- 1 Press to answer a 2nd call.



Note:






- If you want to receive a 2nd call displaying the 2nd caller’s information, activate the call waiting feature (page 51).

Basic Operations

- The 1st call is disconnected if you press  while receiving a 2nd call.
 - Switch between calls by pressing . \Rightarrow ∇/\blacktriangle :
“Swap” \Rightarrow 
-

Conference call

- 1 Connect the 2nd call.
- 2  \Rightarrow ∇/\blacktriangle : “Merge” \Rightarrow 
- 3 Select the desired feature.

Split a call	<ol style="list-style-type: none">1 ∇/\blacktriangle: Select the desired party. \Rightarrow 2 ∇/\blacktriangle: “Split” \Rightarrow 
End a call	∇/\blacktriangle : Select the desired party. \Rightarrow 
End a conference	 \Rightarrow ∇/\blacktriangle : “Release Conf.” \Rightarrow 

Security settings

PIN code

PIN1/PIN2 protects your SIM card against unauthorised use.

- 1 Press . : Select .
- 2 : “Security”
- 3 : “PIN1 Request”
- 4 : Select the desired setting.
- 5 Enter the current PIN1 code (4 to 8 digits).

Important:

- When the PIN1 code request is on, you must enter the PIN1 code each time the phone is turned on.
- If you enter the incorrect PIN1/PIN2 code 3 times, the SIM card is locked. Enter the 8-digit PUK1 code for PIN1 or the 8-digit PUK2 code for PIN2 to unlock.
- If you enter the incorrect PUK1/PUK2 code 10 times, contact your network operator/service provider for further information.
- Both PIN/PUK numbers are issued by your network operator/service provider.

Note:

- The PIN1 code request cannot be set to “Off” with some SIM card types.
- If you want to change the PIN code, see page 55.

Phone code

The phone code protects the phone against unauthorised use.

- 1 Press . : Select .
- 2 : “Security”
- 3 : “Phone Code Request”
- 4 : Select the desired setting.
- 5 Enter the current 4-digit phone code (default: “0000”).

Important:

- When the phone code request is on, you must enter the phone code each time the phone is turned on.
- The phone will automatically turn off if you enter the incorrect phone code 3 times. If you forget your phone code, contact an authorised service centre.

Note:

- If you want to change the phone code, see page 55.


 












Camera

Taking a picture

 - We recommend using a microSD card.

- 1 Press in standby mode.


2 Press to take a picture.

<ul style="list-style-type: none"> • Light on • Light off 	Press  to turn the light on and off (page 3).
<ul style="list-style-type: none"> • Zoom in • Zoom out 	Press and hold  or  .
Adjust the exposure (brightness).	Press  or  .
The following options are available for 5 seconds after taking a picture. (Pressing )	
Send	 /  : "Send"  
Delete	 /  : "Delete"  

Note:














- The phone can capture images and save them in the "Photos" folder in the selected memory location (page 43). For information about camera settings, see page 52.
- When you close the phone while using camera mode, camera mode ends and the phone returns to standby mode.
- If line accumulates on the camera lens, images may become blurry. In this case, wipe the lens with a soft, dry cloth.



Camera options

pressing :

- | | |
|---------------------|---------------------|
| - "Image Viewer" | - "Scene Mode" |
| - "Camera Settings" | - "Effect Settings" |
| - "Image Settings" | - "Storage" |
| - "White Balance" | - "Restore Default" |
-

Image viewer

- 1 Press .  : Select .  
- 2 Press  or  to select the desired file.
- 3   : "View"  

	View the next image
	View the previous image
3	Rotate the image clockwise by 90 degrees.

Note:

- The file number and available function keys are shown on the display for 5 seconds after the image appears on the display. To display them again, press any dial key.
- Some images may not be re-sizable.






Image viewer options

Press ▲. ⇒ ▼/▲: Select . ⇒  ⇒ ▼/▲: Select an image. ⇒ :

- | | |
|--|--|
| <ul style="list-style-type: none"> - “View” - “Image Information” - “Browser Style” - “Send” | <ul style="list-style-type: none"> - “Use as” - “Rename” - “Delete” - “Delete All Files” |
|--|--|

File manager

Opening a folder or file in the memory

- 1 Press ▲. ⇒ ▼/▲: Select . ⇒ 
- 2 ▼/▲: “File Manager” ⇒ 
- 3 ▼/▲: Select the desired memory location (root directory).
- 4  ⇒ ▼/▲: “Open” ⇒ 
- 5 ▼/▲: Select the desired folder or file.

Folder options

- | | |
|--|---|
| <ul style="list-style-type: none"> - “Open” - “New Folder” - “Rename” | <ul style="list-style-type: none"> - “Delete” - “Sort by” |
|--|---|

File options

- | | |
|-----------------------|----------------------|
| - "View" | - "Delete" |
| - "Image Information" | - "Sort by" |
| - "Play" | - "Copy" |
| - "Send" | - "Move" |
| - "Use as" | - "Delete All" Files |
| - "New Folder" | - "Detail" |
| - "Rename" | |

Note:



- If you view the saved files after deleting files, the files may not be sorted correctly.

Menu list

Note:

- In the following table, < > indicates the default settings.

 "Messages" menus

Press ▲. ⇨ ▼/▲: Select . ⇨ 




 



Sub-menu 1	Sub-menu 2	Sub-menu 3	Sub-menu 4	page
Create Message	SMS	–	–	24
	MMS	–	–	25
Inbox	–	–	–	27
Draftbox	–	–	–	–
Outbox	–	–	–	–
Sentbox	–	–	–	–
Delete All	–	–	–	–
Settings	SMS	Service Centre	–	–
		Validity Period* ¹	–	–
		Voicemail	Call Voicemail	22
	Edit		22	

Sub-menu 1	Sub-menu 2	Sub-menu 3	Sub-menu 4	page
Settings	SMS	Status Report^{*2} <Off>	-	-
		Reply Path^{*3} <On>	-	-
		Memory Status	-	-
		Storage Media	-	-
		Save sent SMS <On>	-	-
	MMS	Data Account^{*4}	-	-
		Common Settings	Compose - Slide Time <5> - Creation Mode <Free> - Auto Signature <Off> - Signature	-

Sub-menu 1	Sub-menu 2	Sub-menu 3	Sub-menu 4	page
Settings	MMS	Common Settings	Sending - Delivery Report <Off> - Read Report <Off> - Priority <Medium> - Delivery Time <Immediate> - Send and Save <On>	-
			Retrieval - Home Network <Immediate> - Roaming <As Home> - Filters - Anonymous <Allow> - Advertisement <Allow> - Read Report <On Request> - Delivery Report <On>	-
Settings	MMS	Common Settings	Storage	-
			Memory Status	-

- *1 Set the time period during which the service centre will try to resend the SMS message if it has not been delivered.
- *2 Receive status reports to find out whether your sent SMS messages have been successfully delivered or not.
- *3 SMS messages may be sent using another service centre number when this feature is turned on.
- *4 These settings are required in order to use MMS to receive data over the network. Configure these settings as needed before sending or receiving MMS data.

"Phonebook" menus





Press     : Select   

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Contacts	–	–	29
Add New Contact	–	–	29
Speed Dial	–	–	30
One Touch Dial	–	–	30
My Number	–	–	–
Memory Manager	Storage Media <Phone>	–	–
	Memory Status	–	–
	Copy All	–	–
	Delete All	–	–
FDN Phonebook*1 <Off> (SIM card dependent)	–	–	–

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Service Dial ^{*2} (SIM card dependent)	–	–	–

- *1 Activate or deactivate FDN (Fixed Dialling Number). When this feature is activated, only the phone numbers stored in the FDN list can be shown, dialled, or messaged. The PIN2 code is required every time you access the FDN phonebook.
- *2 Access the special services of your network operator/service provider (such as customer support, emergency services, etc.) if SDN (Service Dialling Number) is included on your SIM card.
-

"Call Menu" menus

Press    : Select   


Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Call Log	Incoming Call	–	21
	Outgoing Call	–	
	Missed Call	–	
	Delete All	–	–
Call Settings	Priority Call	Call Number	38
		Message	39
		Buzzer <On>	–

Sub-menu 1	Sub-menu 2	Sub-menu 3	page	
Call Settings	Call Waiting	–	39	
	Call Divert ^{*1}	–	–	
	Call Barring ^{*2}	Outgoing Barring	–	–
		Incoming Barring	–	–
		Barring Password	–	–
	Show My ID ^{*3} <Network Set>	–	–	
	Auto Redial ^{*4} <Off>	–	–	
	Answer Mode	Any Key <Off>	–	–
Open to Talk <Off>		–	–	

*1 Call divert may not work if call barring is activated.

*2 Call barring may not work if call divert is activated. If you enter the incorrect barring password 3 times, it becomes invalid. Contact your network operator/service provider. The barring password is issued by your network operator/service provider.

*3 When you set this to “**Hide ID**”, you may not be able to make calls depending on the network.

*4 When this feature is on, the phone automatically redials multiple times under certain conditions (no answer, the other party's line is engaged, etc.). To stop auto redial while redialling, press  .

"Camera" menus

Press ▲. ⇒ ▽/▲: Select . ⇒  ⇒ 


Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Image Viewer	–	–	43
Camera Settings	Shutter Sound <Sound 1>	–	43
	EV (Exposure Value) <EV 0>	–	
	Contrast <Medium>	–	
	Delay Timer <Off>	–	
Image Settings	Image Size <Wallpaper (240x320)>	–	43
	Image Quality <Normal>	–	
White Balance <Auto>	–	–	43
Scene Mode <Auto>	–	–	43
Effect Settings <Normal>	–	–	43
Storage <Phone>	–	–	43
Restore Default	–	–	43





“Image Viewer” menus

Press . : Select . : Select an image.

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
View	–	–	44
Image Information	–	–	44
Browser Style <Matrix Style>	–	–	44
Send	As MMS	–	44
	Via Bluetooth	–	
Use as	Wallpaper	–	44
	Caller Picture	–	
Rename	–	–	44
Delete	–	–	44
Delete All Files	–	–	44

 "Settings" menus

Press ▲. ⇨ ▽/▲: Select . ⇨ 

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Phone Settings	Clock Settings	Time Zone	–
		Date & Time	–
		Format Settings – Date Format <D/M/Y> – Time Format <24 hours>	–
		Night Mode <Off>	32
		Summer Time <Off>	–
	Display	Brightness <Level 3>	–
		Wallpaper* ¹ – System <Off> – User Defined	–
		Background <Black>	–
		Clock Display <On>	–
		Font Size <Middle>	12
	Language <Auto>* ²	–	–

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Network	Select Network	–	–
	Selection Mode* ³ <Auto>	–	–
	GPRS Connection* ⁴ <When Needed>	–	–
Connectivity* ⁵	Data Account	–	–
Security	PIN1 Request	–	40
	Change PIN1* ⁶	–	–
	Change PIN2	–	–
	Phone Code Request <Off>	–	41
	Change Phone Code <0000>	–	–
Reset Settings* ⁷	–	–	–

*1 To select a preset wallpaper pattern or to set this feature to “Off”, select “System”. To select one of your image files as the wallpaper pattern, select “User Defined”.

*2 “Auto” means the phone automatically changes the inserted SIM card language, dictated by the language setting of the SIM card.


*3 Set the phone to automatically roam for a network or to search manually. “Auto”: The phone automatically searches for the currently available network.

“Manual”: Depending on network situations the phone displays a list of networks that exist in the current location, allowing you to manually select the desired network.

- *4 You can select whether a GPRS connection is always set up or only when needed.
- *5 These settings are required in order to use MMS to receive data over the network. Configure these settings as needed before sending or receiving MMS data.
- *6 When you change the PIN1 code, make sure that the PIN1 code request is set to “On”.
- *7 All settings other than the following items can be reset to factory default:
 - All SMS/MMS messages, service centre number, and validity period
 - Stored contacts, FDN phonebook, and My number
 - All call logs, Priority call settings, Call waiting, Call divert, and Call barring
 - Time zone, date and time, format settings, summer time, PIN1 code request, Phone code request, and Phone code
 - All recorded voice memos and all schedule items stored in the calendar/schedule
 - Connectivity settings (“Data Account”)
 - Bluetooth MAC address

Customising Your Phone








“Profiles” menus

Press    : Select   

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
General	Activate	–	–
	Customize	Ring Type <Ring only>	–
		Ringtone* ¹ <Ringtone 1>	–
		Message Ringtone* ¹ <Ringtone 2>	–
		Ringer Volume <Maximum>	–
		Keytone <On>	–
	Audible Dialling <Normal>	12	
Reset	–	–	
Silent	–	–	–

*1 The preset melodies in this product are used with permission of
© 2014 Copyrights Vision Inc.

“Tools” menus

Press    : Select   

Sub-menu 1	Sub-menu 2	Sub-menu 3	page
Alarm	–	–	31
File Manager	–	–	44

Sub-menu 1	Sub-menu 2	Sub-menu 3	page	
Bluetooth	On/Off <Off>	–	59	
	Visibility <On>	–	59	
	My Device	–	59	
	My Name	–	60	
	Advanced	Audio Path <To BT Device>		60
		Storage <Phone>		60
MAC Address			60	
Voice Recorder	Record	–	35	
	List	–	35	
Calendar	–	–	33	
Telecoil Mode <Off>*1	–	–	–	

*1 Turn this feature on when you activate the Telecoil mode of your hearing aid. You cannot use the frequency control equalizer feature when this feature is on (page 20).

Note:

- If your SIM card includes SAT (SIM Application Toolkit), display shows network operator/service provider's additional menu in this area. The SIM Toolkit allows the applications existing on the SIM card to interact and operate with your phone. Please contact your network operator/service provider for further information.

 "Ringer Volume" menu

Press    : Select     Press  or  to select the desired volume.  

Note:

- If a corded headset is connected in, both headset and the unit will ring with volume level 1 (Low) for ear protection when receiving a call.

Using a Bluetooth® wireless connection

Note:

- Bluetooth wireless technology uses radio waves and there may be restrictions in some locations. Check with your local authorities.
- Consult the manufacturers of other devices to determine their compatibility with this phone.
- This phone supports the following Bluetooth profiles: HSP/HFP/OPP
- When your phone is connected to both a Bluetooth wireless headset and a corded headset, the corded headset takes priority over the Bluetooth wireless headset for the audio path.
- Ringtone may vary depending on Bluetooth wireless headset you use.

Turning Bluetooth on/off

- 1 Press . / : Select .
- 2 / : “Bluetooth”
- 3 / : “On/Off”
- 4 / : Select the desired setting.

Note:

- R The default setting is “Off”.


Bluetooth features

Note:

- To use your phone with another Bluetooth device, you must first register your phone and the other device with each other. This is called “pairing”.

Bluetooth features options

Press ▲. ⇨ ▼/▲: Select . ⇨  ⇨ ▼/▲:

“Bluetooth” ⇨ :








“On/Off”	Turns Bluetooth on/off.
“Visibility”	Makes your phone visible or invisible to other Bluetooth devices.
“My Device”	Allows you to search and add new Bluetooth devices and lists the paired devices.
– “Search New”	Searches for new Bluetooth devices and shows a list of discovered devices.
● “Connect/ Disconnect”	Connects or disconnects the paired audio device.
● “Auto Connect”	Sets the connected audio device as default.
● “Rename”	Allows you to edit the name of the paired device.
● “Unpair”	Unpairs the paired device.
● “Delete All”	Deletes all the paired devices.

“My Name”	Allows you to edit your phone's name that appears in other Bluetooth devices.
“Advanced”	Allows the following settings.
– “Audio Path”	Switches the audio path from your phone to the connected audio device or vice versa.
– “Storage”	Selects the memory location for saving the files received via Bluetooth data transfer. (Only when the default save destination is set to the “Memory Card” .)
– “MAC Address”	Shows your phone's Bluetooth MAC address information, which may be required when pairing the phone and another Bluetooth device.
















Receiving files from another device

When the data is transferred from another device to your phone, there is a message on the display which prompts you to accept it.



Receiving phonebook data from another device

- 1 Press .
- 2   : Select **“Save to Phone”** or **“Save to SIM”**.  .
- 3 Confirm the details of the vCard, then press .

Receiving vCard (VCF file) data from another device

- 1 Press .
- 2  ⇒ : “Save as File” ⇒ .
- 3 : Select the desired memory location (root directory). ⇒ .
- 4 : “Open” ⇒ .
- 5 : Select the desired folder. ⇒ .
- 6 : “Select” ⇒ .
- 7 Enter the file name (page 22). ⇒ .
- 8 : “Save” ⇒ .

Receiving files other than vCard (VCF file)

- 1 Press  to start receiving the data.
- 2 Wait for the message that indicates the data was received successfully. ⇒ .
- 3 The file manager screen is displayed.

Note:

- The file is saved in the “Received” folder in the selected memory location (page 61). (Only when the default save destination is set to the “Memory Card”.)

Using a USB connection

- 1 Connect the phone to your computer with a USB cable.
- 2 Using your computer, open the desired folder on the phone/memory card and on your computer.
- 3 Using your computer, drag and drop the files and folders you want to copy.

Important:

- Do not disconnect the USB cable from your phone and the computer while data is being transferred, otherwise the data on your phone/memory card may become corrupted.

After the data transfer, return to the USB mass storage screen on your computer and safely disconnect your phone from your computer.



Troubleshooting

If you still have difficulties after following the instructions in this section, turn off the phone, remove the battery, then turn it on again after about 1 minute.


Display messages



Display message	Cause/solution
SIM Error	Contact your network operator/service provider for further information.
Limited Service	There is no network service in your current location. Move to another location where your network can be received properly. You can only call the international emergency number "112".
No Service	There is no network service in your current location. Check the current status and move to a new location with better reception.
PUK1 Blocked! or PUK2 Blocked!	You entered incorrect PUK1/PUK2 code 10 times, therefore PUK1/PUK2 code is blocked. Contact your network operator/service provider.

Useful Information

Display message	Cause/solution
Error! Charging stopped, see manual.	<ul style="list-style-type: none">● This error means that the protection system is working to avoid damage to the battery. Charge the battery only in ambient temperatures ranging from 5 °C to 35 °C.● To return to normal operation:<ol style="list-style-type: none">1. For erase the error message, push 2. For charging reconnect the USB cable
To prevent possible hearing damage, do not listen at high volume levels for long periods.	When you try to set the earphone volume to a certain level, this message will be displayed. Press  to continue adjusting the volume.

General use

Problem	Cause/solution
The phone does not turn on even after installing charged battery.	<ul style="list-style-type: none">● Press  for about 2 seconds to turn the power on.
The phone does not work.	<ul style="list-style-type: none">● Make sure the SIM card and battery are installed correctly (page 5).● Fully charge the battery (page 7).

Problem	Cause/solution
The contacts in the contacts list are not displayed correctly.	<ul style="list-style-type: none"> ● Only characters supported by this phone can be displayed.
The display is in a language I cannot read.	<ul style="list-style-type: none"> ● Change the display language (page 54).
The phone beeps and/or  flashes.	<ul style="list-style-type: none"> ● Battery charge is low. Fully charge the battery (page 7).
I fully charged the battery, but <ul style="list-style-type: none"> –  still flashes or – the operating time seems to be shorter. 	<ul style="list-style-type: none"> ● Clean the battery ends (\oplus, \ominus) and the charge contacts with a dry cloth and charge again. ● It is time to replace the battery (page 5).
Noise is heard, sound cuts in and out.	<ul style="list-style-type: none"> ● You are using the phone in an area with high electrical interference. Move to a location away from sources of interference. ● The GSM network signal is weak. Check the current status and move to a new location until more bars are visible (page 8).
The phone does not ring.	<ul style="list-style-type: none"> ● The ringer volume is turned off. Adjust ringer volume (page 58). ● Night mode is on. Turn it off (page 32).

Problem	Cause/solution
I cannot make a call.	<ul style="list-style-type: none">● Outgoing calls are barred. Deactivate the outgoing call bar settings (page 51).● Your call is withheld. Change the show my ID setting to a setting other than “Hide ID” (page 51).● Fixed dialling feature is enabled (page 49). Disable it.
I cannot receive a call.	<ul style="list-style-type: none">● Incoming calls are barred. Deactivate the incoming call bar settings (page 43).
I cannot send SMS messages.	<ul style="list-style-type: none">● The phone could not connect to the service centre. Confirm that the correct service centre number is stored (page 46).● Fixed dialling feature is enabled (page 49). Disable it.
I cannot receive SMS messages.	<ul style="list-style-type: none">● SMS message transmission was interrupted. Wait until the SMS message has been sent before using other phone functions.
I cannot receive voicemail message notifications.	<ul style="list-style-type: none">● When the SMS message memory is full, you may not be able to receive any new voicemail message notifications. Erase unnecessary SMS messages to receive new voicemail message notifications (page 28).

Problem	Cause/solution
I cannot receive SMS messages even though the phone has enough memory.	<ul style="list-style-type: none">Some kinds of SMS messages can be received only by the SIM card. Check the memory status of the SIM card (page 47) and erase unnecessary SMS messages (page 28).
I cannot receive E-mail messages.	<ul style="list-style-type: none">This phone only supports SMS/MMS message services. Contact your network operator/service provider for details of this service.
Liquid or other form of moisture has entered the phone/charger.	<ul style="list-style-type: none">Disconnect the AC adaptor from the phone/charger. Remove the SIM card, microSD card, and battery from the phone and leave to dry for at least 3 days. After the phone/charger are completely dry, insert the SIM card, microSD card, and battery into the phone. Then reconnect the AC adaptor to charge fully before use. If the phone does not work properly, contact your place of purchase or nearest Panasonic service centre.

Caution:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.

General information

- This phone is designed to operate on GSM network - GSM 900/1800MHz.
- This equipment is designed for use in Germany, Italy, Spain, France, Netherlands, Czech republic, Poland, Hungary, Croatia.
- In the event of problems, you should contact your equipment supplier in the first instance.
- For use in other countries, please contact your equipment supplier.

Declaration of Conformity

Hereby, Panasonic Marketing Europe GmbH declares that the radio equipment type Easy Use Mobile Phone KX-TU446 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.ptc.panasonic.eu/compliance-documents>

Additional/replacement accessories

Please contact your place of purchase or Panasonic sales office for sales information.

Accessory item	Model number
Rechargeable battery	514047AR Lithium Ion (Li-Ion) battery.
Headset	JYK-E112

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty:

Serial No. (found on the carton box or in the battery compartment)	Date of purchase
Name and address of dealer	

Attach your purchase receipt here

Sales department

■ Belgique/België

Panasonic Benelux a branch of
Panasonic Marketing Europe GmbH

Europalaan 28E
5232 BC 's-Hertogenbosch, The Netherlands
Tel. (Belgique/België): 0032 70 223 011
Réparations/Reparaties:
www.panasonic.be

■ France

Panasonic France, une Succursale
de Panasonic Marketing Europe GmbH

1 à 7 Rue du 19 Mars 1962
92238 Gennevilliers Cedex, France
Service Consommateurs:
08 92 35 05 05 (0,34 € la minute)
Service après-vente:
01 70 48 91 73 (numéro non surtaxé)

■ Deutschland

Panasonic Deutschland eine Division der
Panasonic Marketing Europe GmbH

Winsbergring 15
22525 Hamburg
www.panasonic.de

■ Italia

Panasonic Italia - branch office of
Panasonic Marketing Europe GmbH

Viale dell'Innovazione 3
20126 Milano
servizio clienti: 02-67 07 25 56
www.panasonic.it

■ España

Panasonic España, Sucursal de
Panasonic Marketing Europe GmbH

WTC Almeda Park
Plaza dela Pau s/n Edificio 8 planta baja
08940 Cornellà de Llobregat, Barcelona
Número del teléfono de atención al cliente:
902 15 30 60
www.panasonic.es

■ Nederland

Panasonic Netherlands

Europalaan 28E
5232 BC 's-Hertogenbosch
Tel: 073 6 402 802
Reparaties:
www.panasonic.nl

Sales department

■ Magyarország

Panasonic Marketing Europe GmbH,
South-East Europe Fióktelep

1117 Budapest, Aliz u. 4. Office Garden III.
Tel.: +36 80 201 006
E-mail: Customer.Budapest@eu.panasonic.com
Web: www.panasonic.hu

■ Česká republika

Panasonic Marketing Europe GmbH,
organizační složka Česká republika

Thámova 289/13 (Palác Karlín)
186 00 Praha 8
Telefon: +420 236 032 511
Centrální fax: +420 236 032 411
Zákaznická linka: +420 236 032 911
E-mail: panasonic.praha@eu.panasonic.com
Web: www.panasonic.cz

■ Slovenská republika

Panasonic Marketing Europe GmbH,
organizačná zložka Slovenská republika

Štúrova 11
811 01 Bratislava, Slovenská republika
Telefón: +421 2 2062 2211
Fax: +421 2 2062 2311
Zákaznická linka: +421 2 2062 2911
E-mail: panasonic.bratislava@eu.panasonic.com
Web: www.panasonic.sk

■ Romania

Panasonic Marketing Europe GmbH, Wiesbaden,
Germania, Sucursala București, Romania

B-dul Preciziei, Nr. 24, West Gate Park,
Clădirea H3, Etaj 2, Sector 6,
București, 062204, Romania
Telefon: +40 21 316 31 61
Fax: +40 21 316 04 46
E-mail: suport.clienti@eu.panasonic.com
Web: www.panasonic.ro

■ Polska - Dystrybucja w Polsce

Panasonic Marketing Europe GmbH, Oddział
w Polsce (Spółka z ograniczoną odpowiedzialnością)

ul. Wołoska 9A, 02-583 Warszawa

Produkt Panasonic

Produkt objęty jest E-Gwarancją Panasonic.
Prosimy o zachowanie dowodu zakupu.
Warunki gwarancji oraz informacje o produkcie
są dostępne na stronie www.panasonic.com/pl
lub pod numerem telefonu:
801 003 532 - numer dla połączeń z sieci stacjonarnej
22 295 37 27 - numer dla połączeń z sieci stacjonarnej
oraz komórkowej

■ Hrvatska

Panasonic Marketing Europe GmbH
– Podružnica Zagreb













B. Bušića 27
10 020 Zagreb, Hrvatska

Index

- A** Alarm: 31
 - Answer mode
 - Any key: 51
 - Open to talk: 51
 - Answering calls: 21
 - Audible dialling: 12, 57
 - Auto redial: 51
- B** Battery: 5, 8
- Bluetooth: 58
- C** Calendar: 33
 - Call barring: 51
 - Call divert: 51
 - Call log: 19, 24
 - Call waiting: 38
 - Camera: 41
 - Camera settings: 52
 - Conference call: 39
 - Connectivity: 55
- D** Date and time: 54
 - Display
 - Background: 54
 - Brightness: 54
 - Clock: 54
 - Font size: 12, 54
 - Language: 54
 - Wallpaper: 54
 - Display message: 65
- E** Emergency call: 65
- F** File manager: 44
 - Fixed dialling number (FDN): 49
 - Frequency control equalizer: 20
- H** Handsfree: 20
 - Hold: 20, 38
- I** Image viewer: 43
 - International call: 3, 19
- K** Keytone: 57
 - Fixed dialling number (FDN): 49
- L** LED light: 3
- M** Making calls: 19
 - Menu list: 46
 - microSD card: 5
 - Missed calls: 21
 - MMS message: 25
 - MMS settings: 47, 48
 - Mute: 20
 - My number: 49
- N** Network: 55
 - Night mode: 32
- O** One touch dial: 20, 30
- P** Pause: 19

- Phone code: 41, 55
- Phonebook: 19, 28
- Phonebook settings: 49
- PIN: 40, 55
- Power on/off: 11
- Priority call: 36
- PUK: 40, 64
- R** Rejecting a call: 21
- Reset settings: 55
- Ringer profiles: 57
- Ringer tone: 57
- S** Schedule: 33
- Service dialling number (SDN): 50
- Show my ID: 51
- Silent mode: 3, 57
- SIM application toolkit (SAT): 58
- SIM card: 5
- SMS message: 24
- SMS settings
 - Reply path: 47
 - Service centre: 46
 - Status report: 47
 - Validity period: 46
- Speed dial: 20, 30
- Summer time: 54
- T** Telecoil (T-coil) mode: 58
- Text input: 23
- Troubleshooting: 64
- U** USB
 - Charging: 7
 - Connecting to a computer: 63
- V** Vibration: 57
- Voice recording: 35
- Voicemail: 22
- Volume
 - Receiver: 2
 - Ringer: 2, 58
 - Speaker: 2

Graphical symbols for use on equipment and their descriptions

Symbol	Explanation	Symbol	Explanation
	Alternating current (A.C.)		Class P equipment (equipment in which protection against electric shock rely on Double Insulation or Reinforced Insulation.)
	Direct current (D.C.)		"ON" (power)
	Protective earth		"OFF" (power)
	Protective bonding earth		Stand-by (power)
	Functional earth		"ON"/"OFF" (power; push-push)
	For indoor use only		Caution, risk of electric shock

Panasonic Corporation

1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8501, Japan
www.panasonic.com

© Panasonic Corporation 2019